

Vacuum Cleaner

user manual

- * Before operating this unit, please read the instructions carefully.
- * For indoor use only.

English

imagine the possibilities

Thank you for purchasing a Samsung product.
To receive a more complete service,
please register your product at
www.samsung.com/register



safety information

SAFETY INFORMATION



- Before operating the appliance, please read this manual thoroughly and retain it for your reference.



- Because these following operating instructions cover various models, the characteristics of your vacuum cleaner may differ slightly from those described in this manual.

CAUTION/WARNING SYMBOLS USED

	Indicates that a danger of death or serious injury exists.
	Indicates that a risk of personal injury or material damage exists.

OTHER SYMBOLS USED

	Represents something you must NOT do.
	Represents something you must follow.
	Indicates that you must disconnect the power plug from the socket.

safety information

IMPORTANT SAFEGUARDS

- Read all instructions carefully. Before switching on, make sure that the voltage of your electricity supply is the same as that indicated on the rating plate on the bottom of the cleaner.
- WARNING: Do not use the vacuum cleaner when rug or floor is wet.
Do not use to suck up water.
- Close supervision is necessary when any appliance is used by or near children. Do not allow the vacuum cleaner to be used as a toy. Do not allow the vacuum cleaner to run unattended at any time. Use the vacuum cleaner only for its intended use as described in these instructions.
- Do not use the vacuum cleaner without a dust bag.
Change the dust bag before it is full in order to maintain the best efficiency.
- Do not use the vacuum cleaner to pick up matches, live ashes or cigarette butts. Keep the vacuum cleaner away from stoves and other heat sources. Heat can deform and discolour the plastic parts of the unit.
- Avoid picking up hard, sharp objects with the vacuum cleaner as they may damage the cleaner parts. Do not stand on the hose assembly. Do not put weight on the hose. Do not block the suction or the exhaust port.
- Switch the vacuum cleaner off on the body of the machine before unplugging from the electrical outlet. Disconnect the plug from the electrical outlet before changing the dust bag or dust container. To avoid damage, please remove the plug by grasping the plug itself, not by pulling on the cord.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- The plug must be removed from the socket outlet before cleaning or maintaining the appliance.
- The use of an extension cord is not recommended.
- If your vacuum cleaner is not operating correctly, switch off the power supply and consult an authorized service agent.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Don't carry the vacuum cleaner by holding the hose.
Use the handle on the vacuum cleaner set.
- Unplug the cleaner when not in use. Turn off the power switch before unplugging.

contents

ASSEMBLING THE CLEANER 05 Assembling the Cleaner

05

OPERATING THE CLEANER 06 Power cord

06 On/Off Switch

06 Power control

06

MAINTAIN TOOLS AND FILTER 08 Using accessory

10 Maintain floor tools

11 Check filter indicator

12 Changing the dust bag

12 Cleaning inlet filter

12 Cleaning outlet filter


13 Change the battery (Optional)

08


TROUBLESHOOTING

14


assembling the cleaner

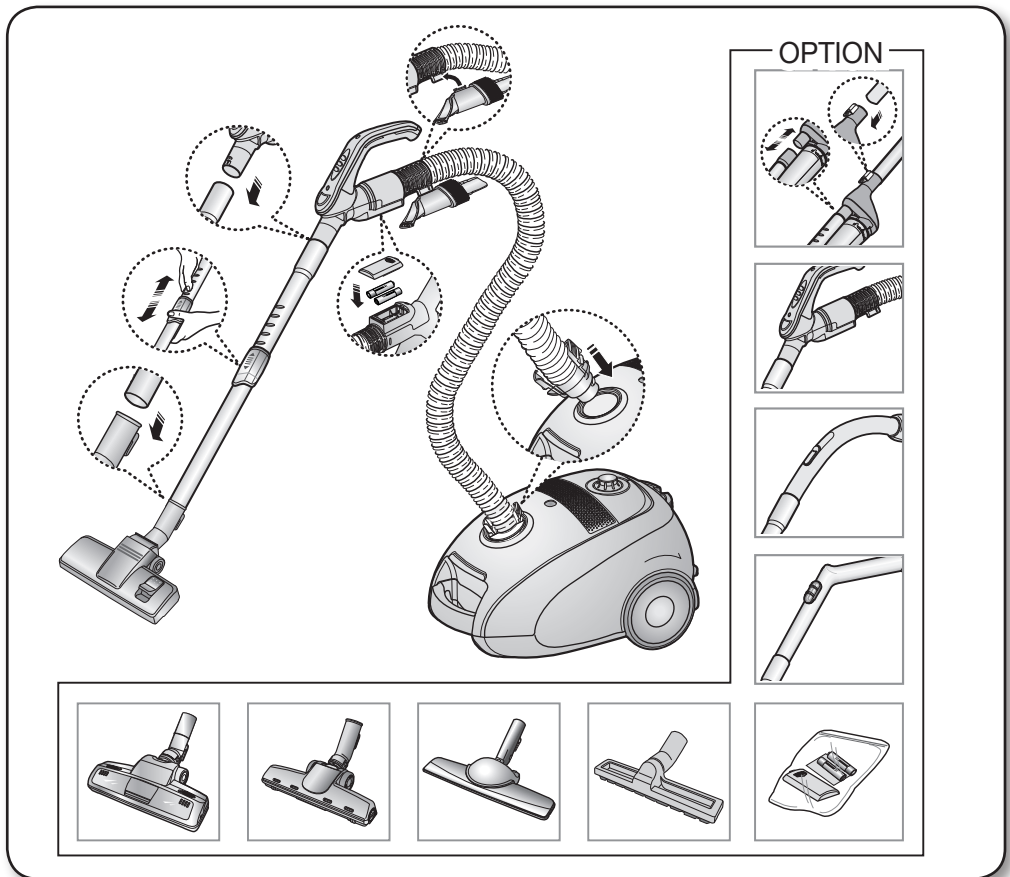

- ★ • Features may vary according to model. Refer to 5,6 page.

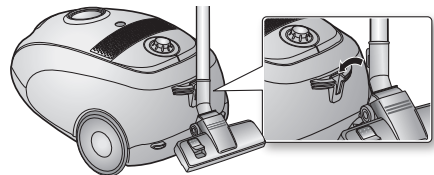


- ★ • For storage, park the floor nozzle.

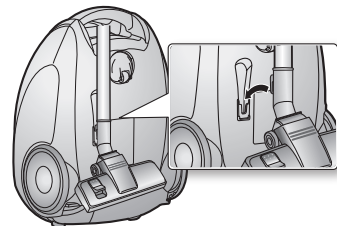


operating the cleaner


POWER CORD

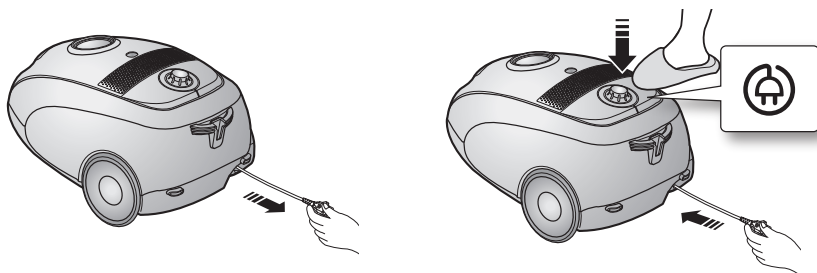

- When removing the plug from the electrical outlet, grasp the plug, not the cord.



ON/OFF SWITCH

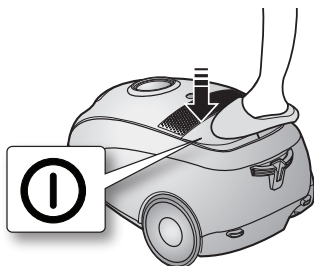


POWER CONTROL

Remote-control type (OPTIONAL)

- HOSE

1. Vacuum cleaner ON/OFF
Press the ON/OFF button to operate the vacuum cleaner.
Press again to stop the vacuum cleaner.
2. Vacuum cleaner MIN/MID
Press the MIN/MID button to operate the vacuum at a low level (for curtain cleaning, etc.).
Press again to operate the vacuum in a MID mode.
3. Using at MAX
Press the MAX button to operate the vacuum at maximum intake.

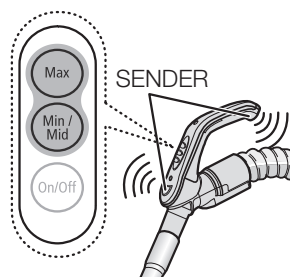


HANDLE CONTROL

[The cleaner is controlled by using infrared signals.]

- BODY

Press the power ON/OFF button repeatedly to start and to stop the vacuum cleaner.
(OFF → ON → OFF)

- ★ If the remote handle control is not working, the cleaner can be operated using the ON/OFF button on the body of the machine.


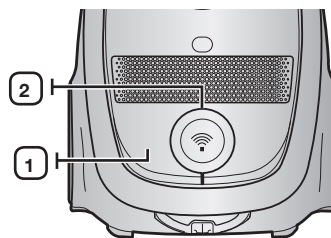


1		The ON/OFF button operates the vacuum cleaner or stops it.
2		The INFRARED light indicates the part that receives the infra-red signal from the handle control.

Body-control type (OPTIONAL)

- HOSE

To reduce suction for leaning draperies, small rugs, and other light fabrics, pull the tap air until the hole is open

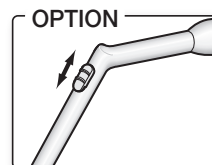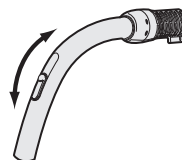


- BODY (VOLUME TYPE ONLY)

To control power level, just slide the power control bottom right and left.

MIN = For delicate fabrics, e.g.net curtains.

MAX = For hard floors and heavily soiled carpets.

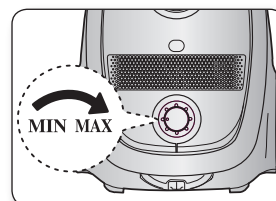


maintain tools and filter


USING ACCESSORY

Pipe

- Adjust the length of the telescopic pipe by sliding the length control button located in the center of the telescopic pipe back and forth.

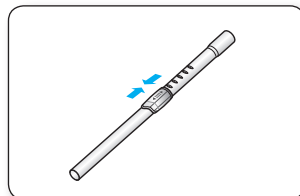


- To check for blockages, separate the telescopic pipe and adjust to shorten. This allows for easier removal of waste clogging the tube.

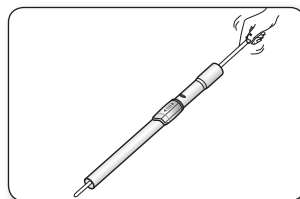


Accessory (Optional)


- Push the accessory on to the end of the hose handle.

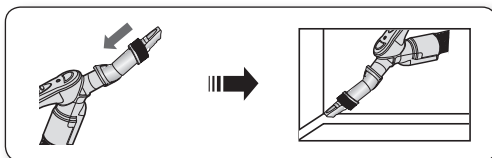

- Pull out and turn the dusting brush for cleaning delicate areas.

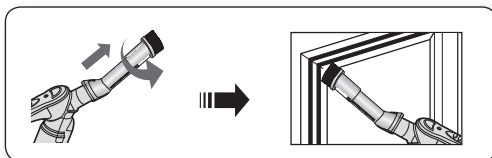


- To use the upholstery tool, push the accessory on to the end of the hose handle in the opposite direction.

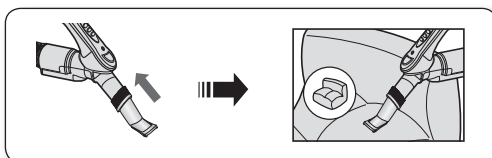


Accessory (Optional)









- Dusting brush for furniture. shelves, books, etc.

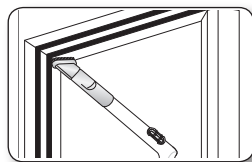

- Crevice tool for radiators, crevices, corners, between cushions.

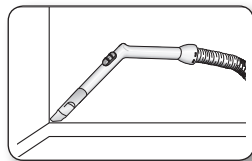


CLEANING THE CYCLONE FILTER (Optional)

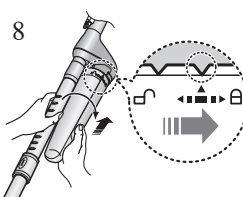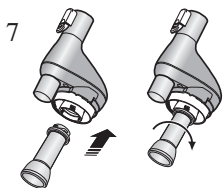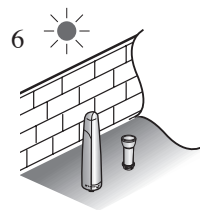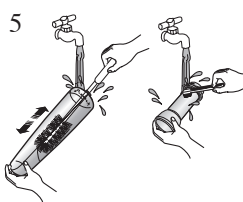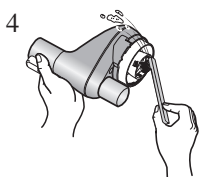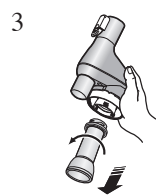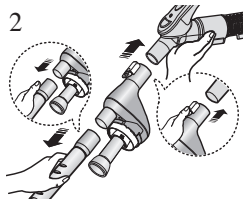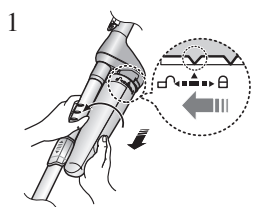

CAUTION • It is necessary to use Cyclone Filter while cleaning.

- CLEANING THE INNER PART OF CYCLONE FILTER

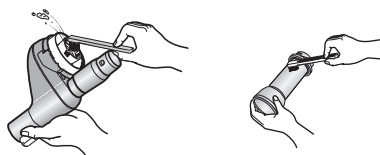


maintain tools and filter


MAINTAIN FLOOR TOOLS

2-Step Brush (Option)

- Adjust the inlet lever according to the floor surface.

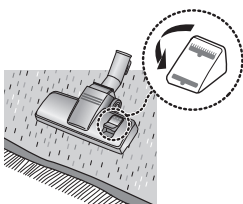


Carpet Cleaning

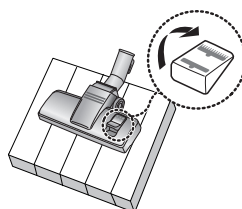

Floor Cleaning


- Remove waste matter completely if the inlet is blocked.

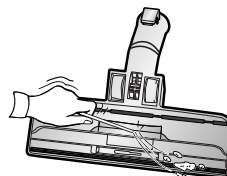

Pet Brush (Option)


For improved pick-up of pet hair and fibre on carpets.

Frequent vacuuming of hair or pet fur may cause a falling-off of the rotation due to matters tangled around the drum. In this case, clean the drum with care.

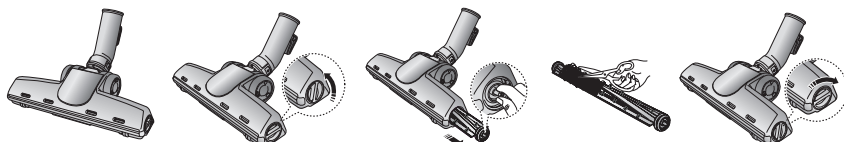


Parquet brush (Option)

Vacuum dust in wide area at once

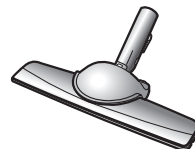

- Remove waste matter completely if the inlet is blocked.

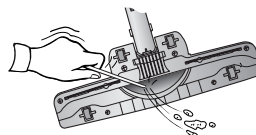


Power Turbo Plus (Option)


For improved pick-up of pet hair and fibre on carpets.

Frequent vacuuming of hair or pet fur may cause a falling-off of the rotation due to matters tangled around the drum. In this case, clean the drum with care.

1. Push the Open button on the transparent screen cover to separate the cover.

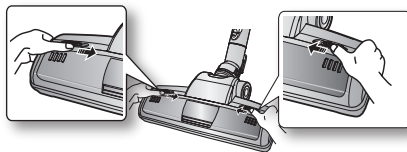


2. Remove the brushbar from the transparent screen.

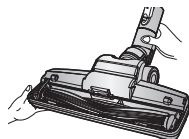


3. Remove waste matter such as dust and hair tangled around the brushbar using scissors.




4. Remove dust inside the brush housing using a dry duster or crevice tool.

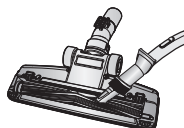

5. Insert brushbar into rotating belt and assemble.

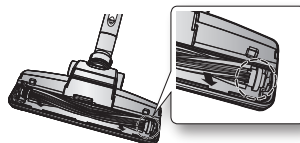

6. Click the transparent screen cover back into place to reassemble.

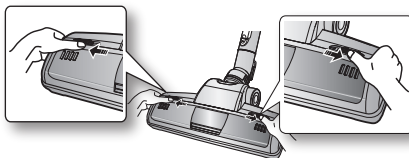


CHECK FILTER INDICATOR

If the "Filter Check" indicator turns to red color while you are cleaning, the dust bag requires replacement.




If the "Filter Check" indicator continues to display red color even after having changed bag into new one, turn the cleaner off and check if there is any clogging in the hose, tube, floor nozzle, or on the inlet/outlet filter.

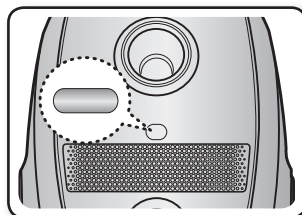

maintain tools and filter

CHANGING THE DUST BAG

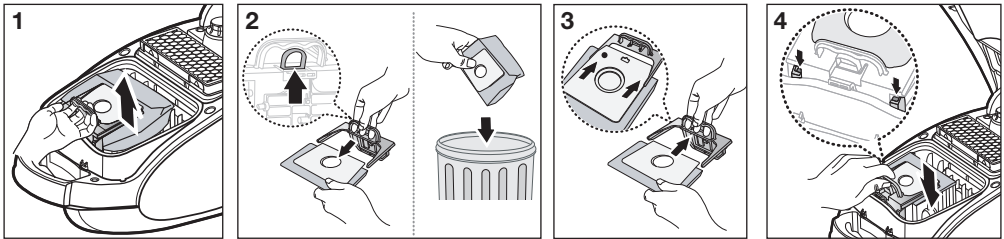


OPTIONAL


- For Cloth Bag
After using, if the cloth bag is full of dust, clean the cloth bag and use it again.
- For Micro Bag
A used dust bag can be sealed by removing the paper from the adhesive strip and sealing the strip over the hole.



You can purchase dust bags in the shops where you bought this vacuum cleaner.
Paper bag can be used as you prefer (Micro-bag:VP-78M, Paper-bag:VP-77)




CLEANING INLET FILTER

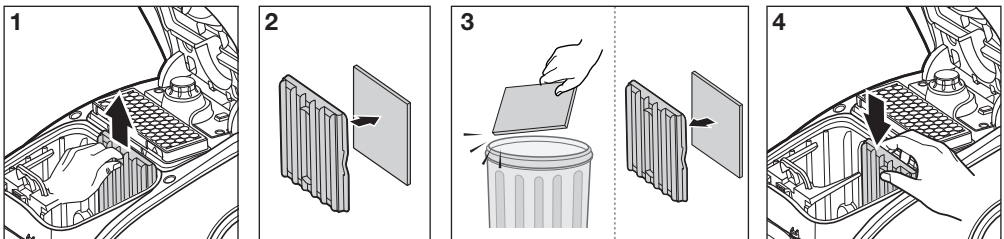

Don't throw away the filter.

CLEANING OUTLET FILTER

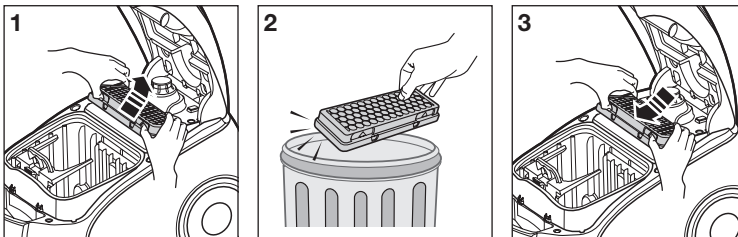

Replacement filters are available at your local Samsung distributor.

maintain tools and filter

CHANGE THE BATTERY (OPTIONAL)



1. When the vacuum cleaner does not work, replace the batteries. If the problem persists, please contact our authorized dealer.

2. Use 2 batteries of size AA.




WARNING

1. Never disassemble or recharge the batteries.

2. Never heat up the batteries or throw them into fire.

3. Do not reverse (+), (-) poles

4. Dispose of the batteries properly.

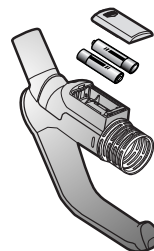

BATTERY TYPE : AA Size



troubleshooting

PROBLEM	SOLUTION
Motor dows not start.	• Check cable, pulg and socket. • Leave to cool.
Suction force is gradually decreasing.	• Check for blockage and remove.
Cord does not rewind fully.	• Pull the cord out 2-3m and push down the cord rewind button.
Vacuum cleaner dows not pick up dirt.	• Check hose and replace if required.
Low or decreasing suction	• Please check filter and, if required, clean as illustrated in the instructions.

memo



If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center.

Country	Customer Care Center ☎	Web Site
AUSTRALIA	1300 362 603	www.samsung.com/au
HONG KONG	3698 4698	www.samsung.com/hk
MALAYSIA	1800-88-9999	www.samsung.com/my
SINGAPORE	1800-SAMSUNG (7267864)	www.samsung.com/sg